

MB1668 External Blast Timer

The MB1668 External Blast Timer is a factory-installed option that increases the efficiency of your blasting operation by providing repeatability of the process.

In manual blasting applications, the operator controls the length of the blasting time. With the MB1668, the timer controls the blast duration, thereby eliminating operator variations that may occur in manual use. If the duration of each blast is crucial to your process, the MB1668 provides you with the solution!

- Offers a wide range of blast times
- Easily changes from timed mode to manual mode



After a factory-installed plug socket is added to your blaster, the timer can easily be plugged directly into the back of the unit. The timer is mounted on top of the machine with Velcro pads. A toggle switch located on the back of the blaster (factory-installed) allows the operator to change from manual mode to timed mode.

Setting the length of the blast time is also simple. All of the adjustment selectors are located on the front of the timer and are easily accessible to the operator. A guide, included with the timer, explains how to set the blast cycle from less than 1 second to more than 60 minutes. Once the timer is set, depressing the blaster footswitch activates the blast cycle for only the preset period of time. When blasting with the timer is not desired, the operator simply moves the toggle switch back to the 'footswitch' position to restore the blast cycle to manual mode.



The timer attaches to the top of any MicroBlaster® model or can be placed behind the unit.

Call us today to find out more about how the MB1668 External Blast Timer can provide your process with increased control and a higher degree of repeatability!

Comco Inc. 2151 N. Lincoln Street / Burbank CA 91504-3344, USA / 818-841-5500

E-mail: sales@COMCOinc.com / Fax: 818-955-8365 / www.COMCOinc.com

MB1668ps
12/2009

COMCO INC.
(800) 796-6626